

WEISER


SMARTCODE 5

TOUCHPAD ELECTRONIC DEADBOLT




How to Perform the Door Handing Process

1

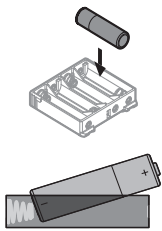


Install 4 AA batteries in battery pack.

2

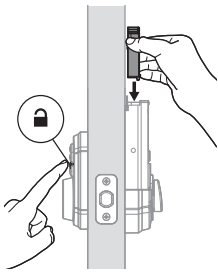

Press and HOLD the Lock button while installing battery pack.
Hold button until the latch bolt starts moving on its own.

3

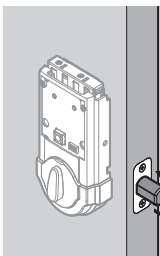

Did the latch bolt retract and extend on its own when the battery pack was installed?

YES

Door handing process was successful!
Proceed to adding user codes after latch bolt stops moving.

or

NO

Remove battery pack, wait 15 seconds, then attempt the process again.

Programming Video: <https://www.youtube.com/watch?v=Z9BHuaDbfDw&t=73s>
Installation Video: <https://www.youtube.com/watch?v=gePRRHMC7nw&t=87s>

THE LEADER IN RESIDENTIAL SECURITY

213826 10/17

WEISER


SMARTCODE 5

TOUCHPAD ELECTRONIC DEADBOLT




How to Add a Code:

 1

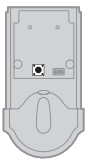


Use a phillips screwdriver to remove the 2 set screws on the interior of the lock. Remove cover and set aside.

2

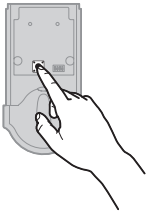


Make sure the door is open. Press the Program button the number of times that corresponds to the user code position being programmed.

3

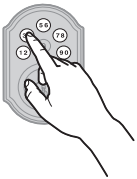

Enter new user code. A total of 8 user codes may be programmed.

4

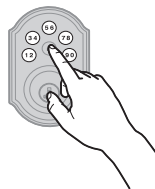


Press the "Lock" button once.

Green
(x1)



If programming is successful, one green flash with one beep*

Red
(x3)

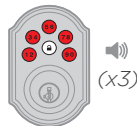

If programming is unsuccessful, three red flashes with three beeps*

*Beeping sound will only be heard if switch #3 (on the lock interior) is in the on position


WEISER


SMARTCODE 5


TOUCHPAD ELECTRONIC DEADBOLT





How to Remove a Code:

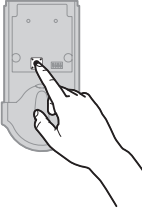

- 

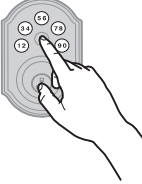1 Use a phillips screwdriver to remove the 2 set screws on the interior of the lock. Remove cover and set aside.
 - 

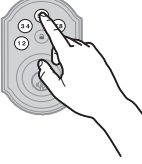2 Press the round program button that was under the cover you removed.
 - 

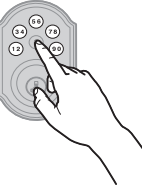3 Press the "Lock" button once.
 - 

4 Override the code by adding a different user code in the same position. For example, if you want to delete the third code, add a different user code in position three.
 - 

5 Press the "Lock" button once.
- Green* (x1)  (x1) If programming is successful, one green flash with one beep*
- Red* (x3)  (x3) If programming is unsuccessful, three red flashes with three beeps*

*Beeping sound will only be heard if switch #3 (on the lock interior) is in the on position

THE LEADER IN RESIDENTIAL SECURITY

213826 10/17